



CAUTION !


DO NOT REMOVE MODULES FROM MAGNETIC TRAY AT THIS STAGE

The magnets are very powerful, it is important to follow these step by step instructions to avoid damaging the product.



Remove the two clear base brackets and the magnetic tray from the box ensuring not to remove any modules from the tray.

1

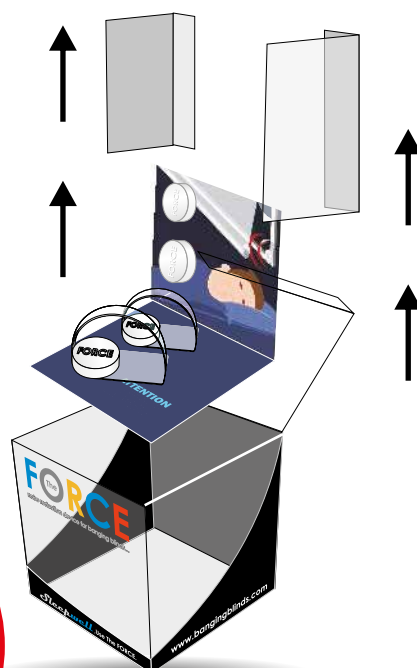


IMPORTANT !


DO NOT press on the barrier this can damage the module




2

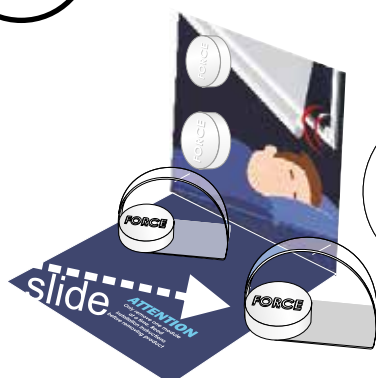


Slide **ONE** barrier module from the magnetic tray...

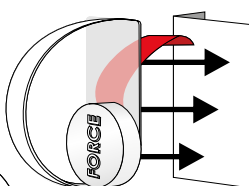

+

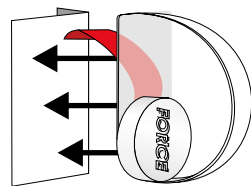


=

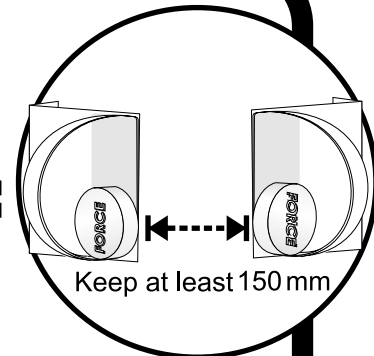


Keep at least 150mm

Peel off the modules' backing, stick the modules to the clear brackets to create a pair as shown above, **During this step ensure the modules stay at least 150mm**

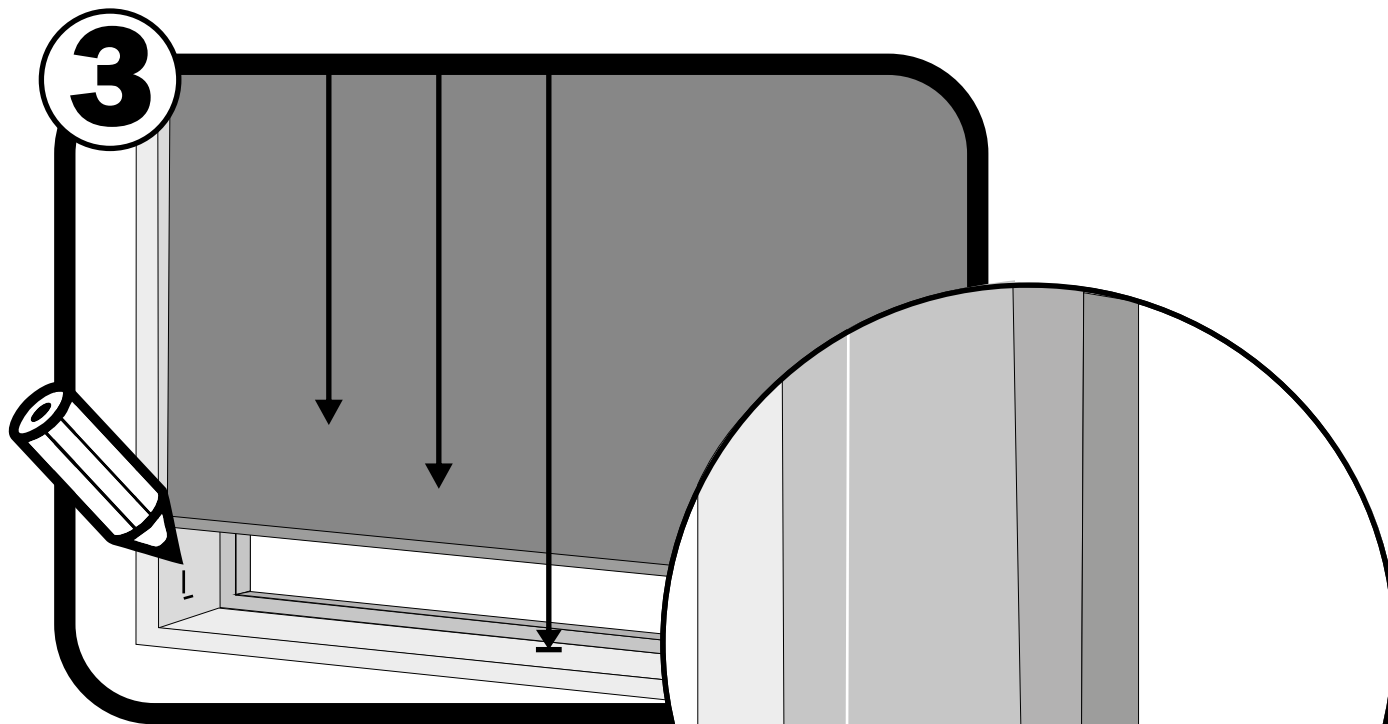

Lower the blind to its bottom limit. It is important that the blind has a stopper to ensure it stops at the same point every time. Your blinds should have been supplied with stoppers, if not they are available for purchase at www.scottfreeaust.com.au. Mark the back & bottom edges of the base rail in the window reveal.

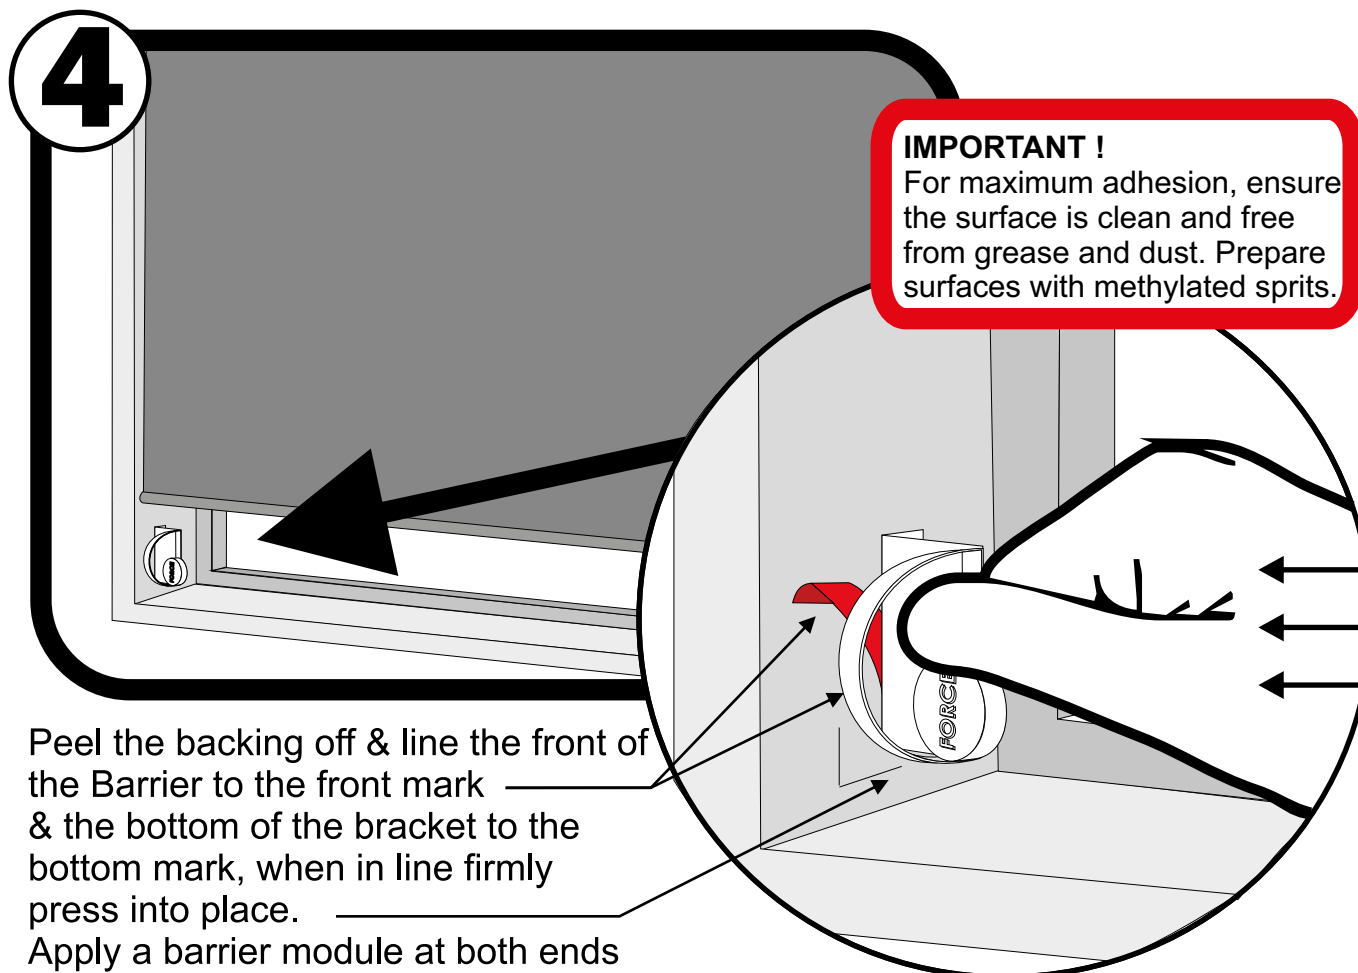

IMPORTANT !


For maximum adhesion, ensure the surface is clean and free from grease and dust. Prepare surfaces with methylated sprits.

Peel the backing off & line the front of the Barrier to the front mark & the bottom of the bracket to the bottom mark, when in line firmly press into place. Apply a barrier module at both ends of the window.


This step shows how to place the base bar module on the back of the base bar. Lower the blind to its bottom limit. it is important that the blind has a stopper to ensure it stops at the same point every time. Your blinds should have been supplied with stoppers, if not they are available for purchase at www.scottfreeaust.com.au

IMPORTANT !

For maximum adhesion, ensure the surface is clean and free from grease and dust. Prepare surfaces with methylated sprits.

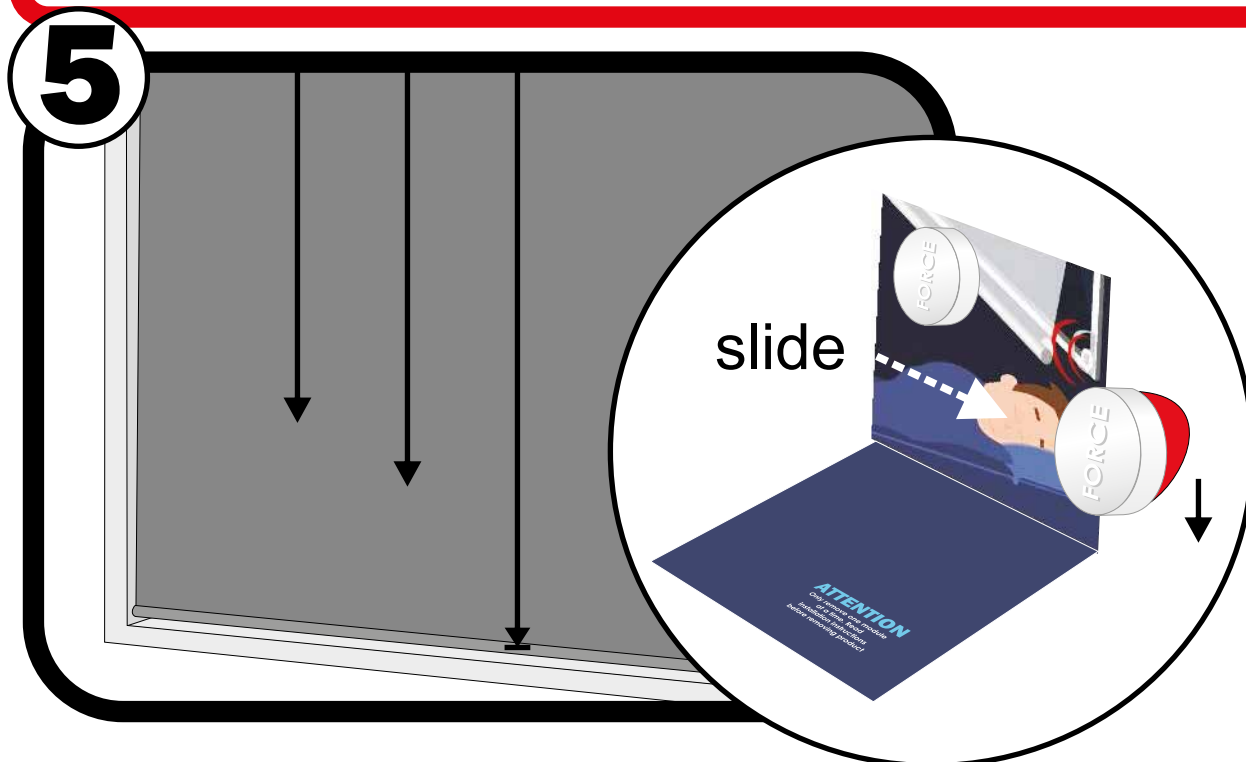

Slide **ONE** base bar module from the magnetic tray... peel the backing off of the module

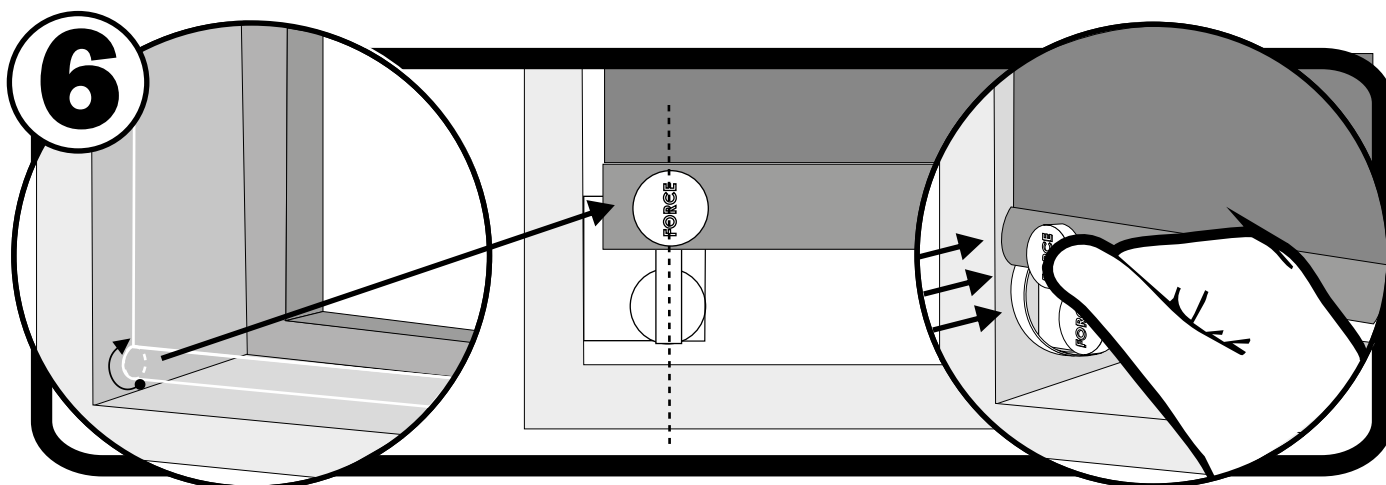

Roll the base bar up half a turn so the back of the base bar is facing toward you. While holding the rolled up base rail, Aline the base bar module with the barrier module in the window reveal, when in line firmly press the module in place on the base rail. repeat this process at the other end of the blind. Congratulation, the FORCE is now installed.

***Live*well,*Sleep*well with The FORCE.**

No more shoes or pillows jammed behind the blinds to deaden the sound of banging blinds ,sleep in silence, have fresh air circulating while still enjoying the function of the blind, privacy, room darkening or protection from the sun.